



## Washout Booth

Assembly instructions for: VWB-3621, VWB-3621-AC  
VWB-5121, VWB-5121-AC



VWB-3621-AC




VWB-5121

This manual contains the following documents:


- **Part Identification**
- **Assembly Instructions**

Vastex International, Inc.  
1032 N. Irving St.  
Allentown, Pa. 18109 USA  
Phone# 610 434-6004 Fax# 610 434-6607  
Web Site [www.vastex.com](http://www.vastex.com)  
E-Mail [info@vastex.com](mailto:info@vastex.com)

## Part Identification


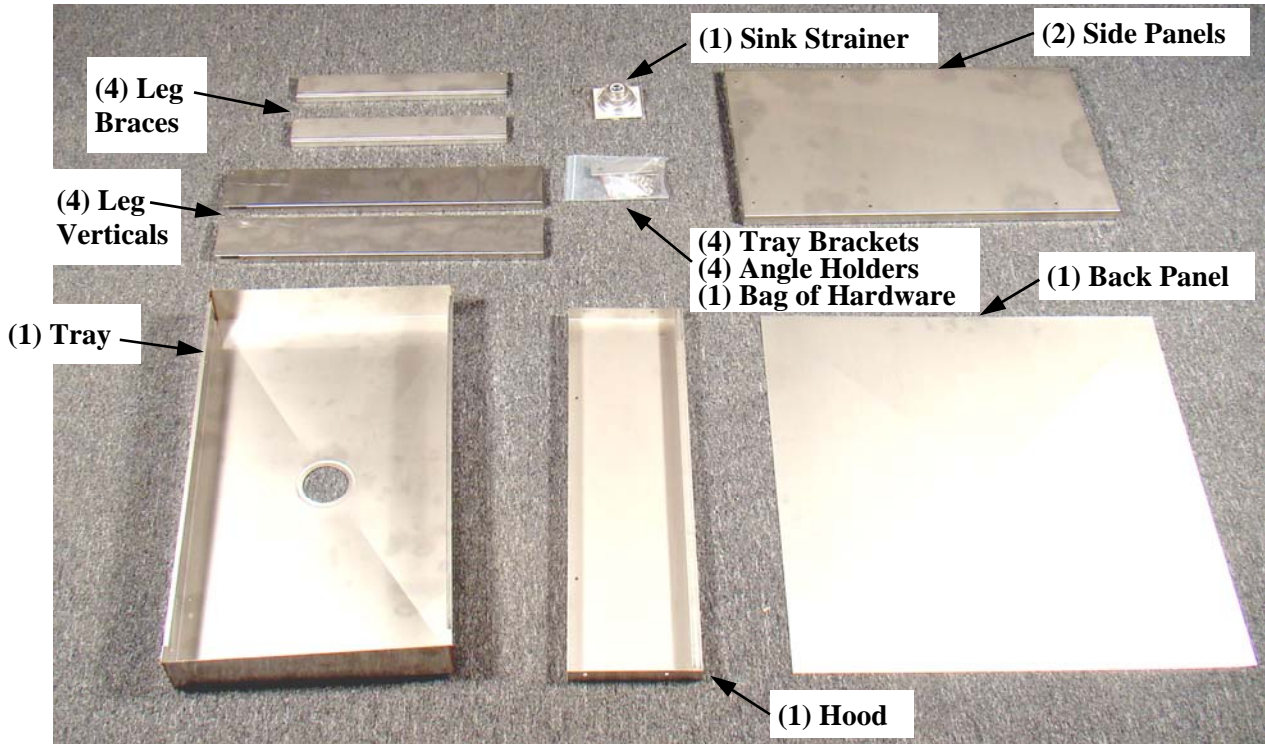


## VWB-xxxx-AC Part Identification

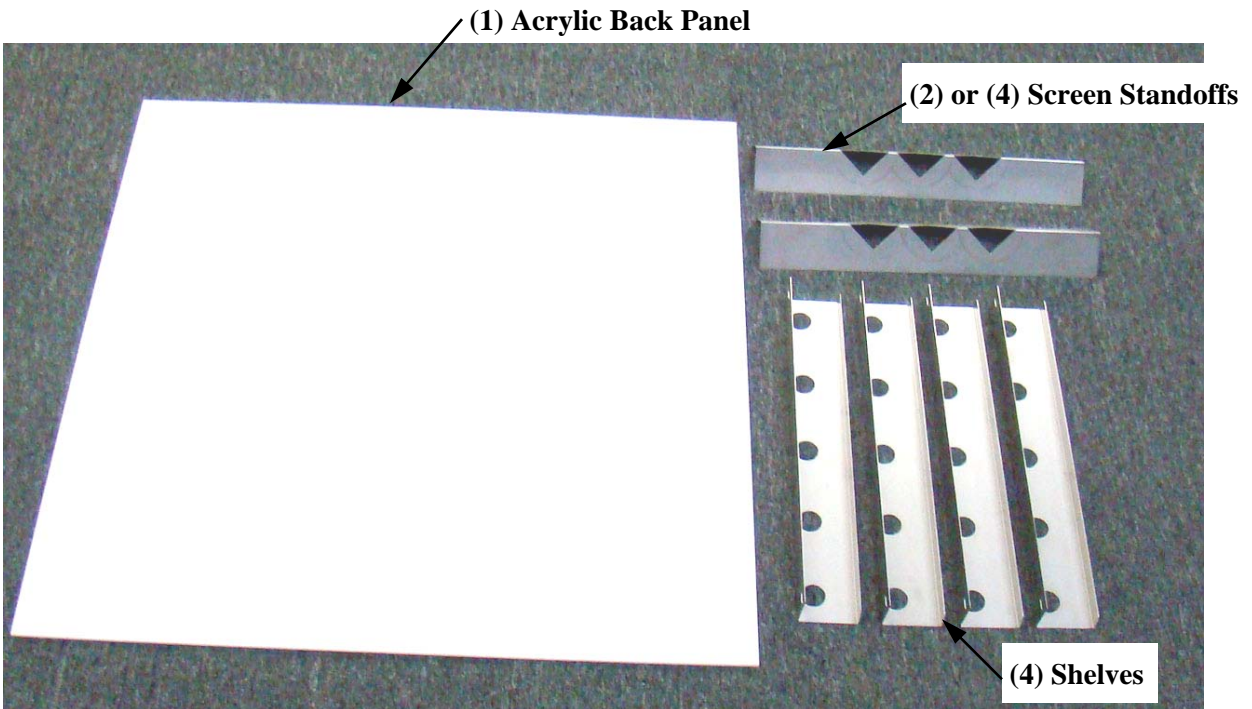


# Base Model Assembly

1) First put together (2) Leg Assemblies as shown in the following pictures. Use supplied #10 Philips head bolts, lock washers, and nuts.

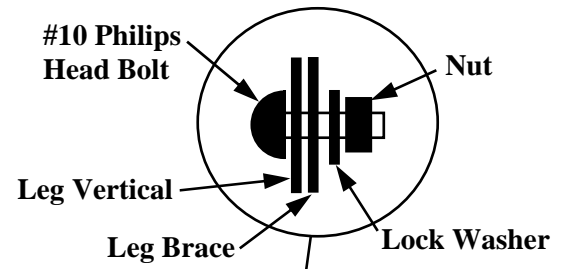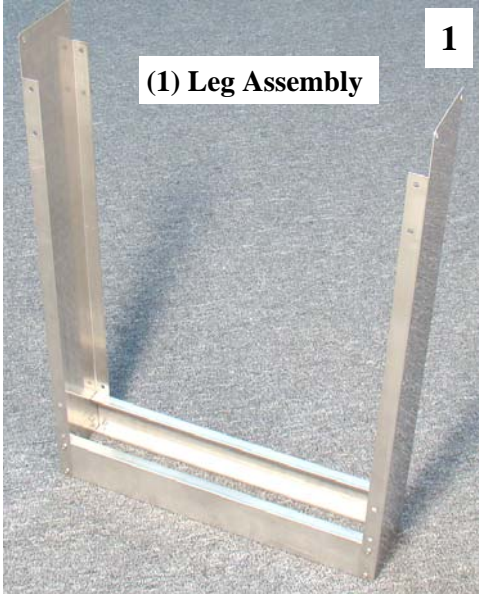

2) Once you have (2) Leg Assemblies finished, space them apart and place the Tray on top as shown at the right.

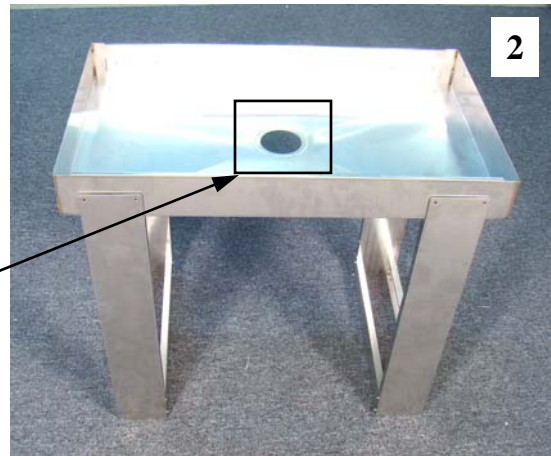


3) Install Sink Strainer into Tray.  
**See Details on strainer package.**



4) Attach the Leg Assemblies to the Tray using the Tray Brackets and #10 hardware.

**Leave these loose for now.**

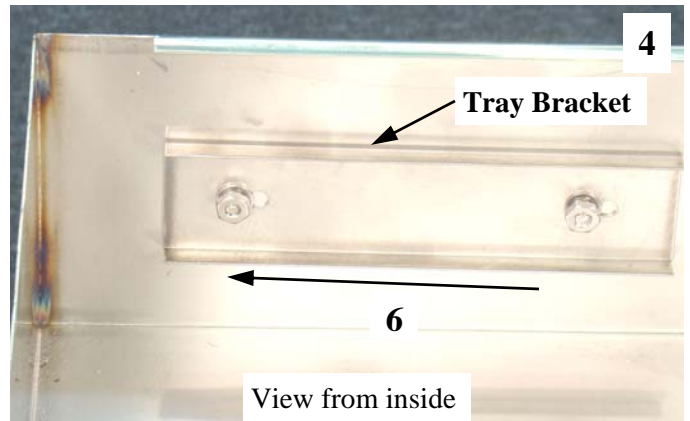

## Base Model Assembly cont'd

5) Slide Side Panels into Tray as shown. The holes on the Sides must be at the top.



6) Tray Brackets can now be slid against the Sides and tightened down. Be sure the Sides are tight against the Tray when tightened.


**Repeat on all (4) corners.**

7) Next install (2) bolts on the Hood as shown at the right. The long edge of the Hood with the (2) holes goes towards the back and hangs down at this point. Use 1/4" bolts with nuts to install the Hood.

**Leave these bolts loose for now.**





8) Flip Hood up as shown, and slide Back Panel into place. For "-AC" model, install Acrylic Back Panel.

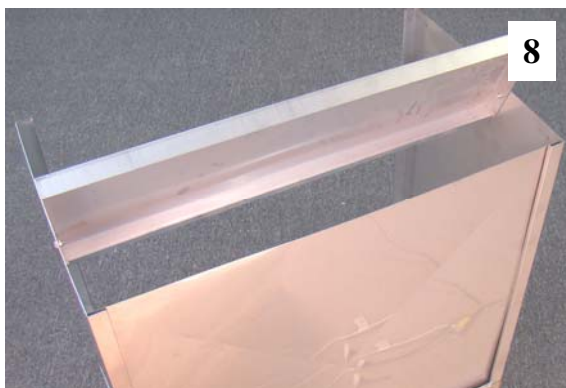

9) Lay the Hood down so the Back Panel is held in place by the Hood's return edge. Install (2) remaining 1/4" bolts and tighten all (4) bolts.



**10)** Install (6) Angle Holders using 1/4" bolts and nuts. If "-AC" model, see **step 11** before tightening. Be sure to push the Angle Holders against Back Panel when tightening.

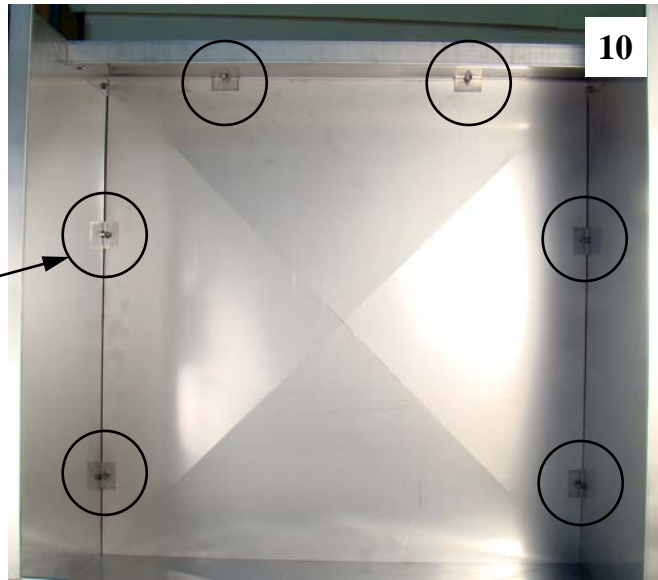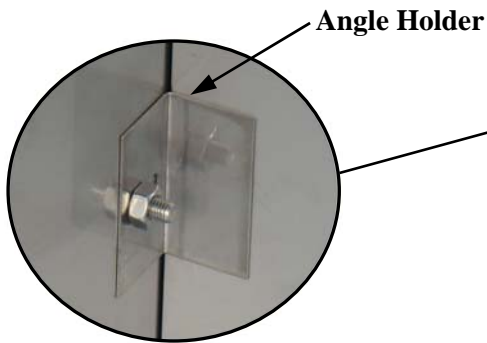

**11)** Optional Shelves are installed as shown at the right. The Angle Holders share a hole with the Shelves.

**12)** Screen Standoffs are placed in the bottom of the Tray for screens to sit in.  
**VWB-5121-AC** gets (4) Screen Standoffs  
**VWB-3621-AC** gets (2) Screen Standoffs

